


## Measurement Guide for Curtains

### WIDTH (track or pole)

This is the total length of the desired pole or track = window width plus an additional 100mm to 150mm each side.  
(Note: Pole width does not include Finials).

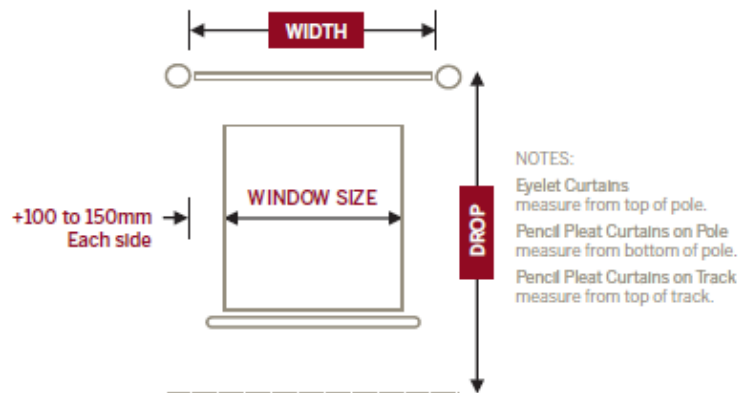


### DROP

This is the distance from the top of the pole or track to where the bottom of the fabric needs to finish.  
Poles or tracks are usually positioned 100mm - 150mm above the window recess and the fabric finishes 100mm - 150mm below the recess or down to the floor.

## Measurement Guide for Roller & Vertical Blinds

### WIDTH

If blinds are to fit within the window recess, measure the exact internal width (at the top).  
If the blinds are to go on the outside of the recess allow approximately an additional 100mm to the recess size on the left and right.

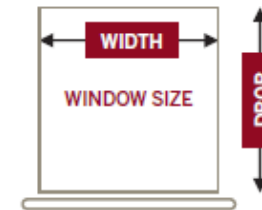

### DROP

If blinds are to fit in the recess, measure the exact internal drop.  
If the blinds are to go on the outside of the recess allow approximately an additional 100mm to the recess size on the top and bottom.